

OPERATING INSTRUCTIONS W1411


OPERATING THE ALARM

1. To set the alarm, Place the Normal / Set Switch into the Set Position.
2. Turn the Alarm Set pot until the display shows the level at which you want the alarm to sound.
3. Replace the Normal / Set Switch into the Normal Position.

When loading the vehicle, The alarm will sound when the display reaches the preset level.

The On / Off Switch can be used to silence the alarm when the level has been exceeded.

The Alarm will only sound with the Switch in the ON position.

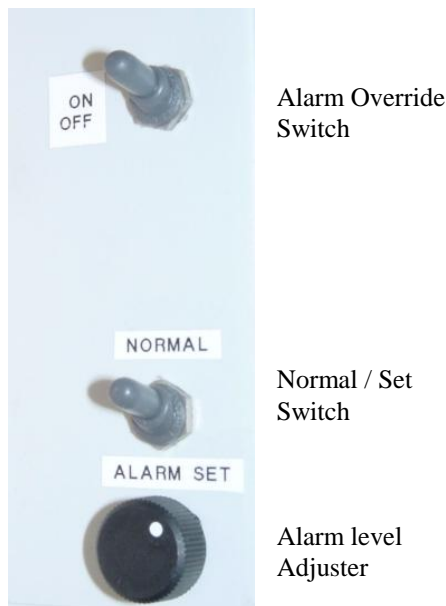

Connector 8 Way			
24V	Power Cable	Brown	+ Supply Side Lights
0V		Blue	Ground of vehicle
24V	Alarm Cable	Brown	+ Supply to Alarm
0V		Blue	Ground to Alarm
10V	Loadcell Cable to Junction box	Brown	10V Supply to cells
0V		Blue	0V Supply to cells
- IN		Black	- Signal from cells
+ IN		White	+ Signal from cells

WELDING MAINTENANCE

Disconnect Power from Display when undertaking any welding work.

LOADCELL MAINTENANCE

Regular checks that all Loadcell Mounting Bolts are tightened to the correct torque are essential.

JUNCTION BOX CONNECTIONS

